




OMSID # 205703189  
Model # THD337311.2a

## USE AND CARE GUIDE

---

### Elite Storage Cabinet - Espresso

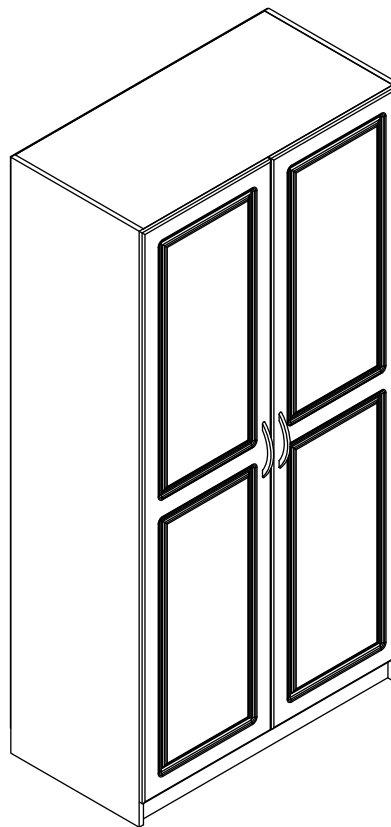

Questions, problems, missing parts? Before returning to the store,  
call Hampton Bay Customer Service  
8 a.m. - 6 p.m., EST, Monday - Friday

**1-855-HD-HAMPTON**

**HAMPTONBAY.COM**

---

#### **THANK YOU**

*We appreciate the trust and confidence you have placed in Hampton Bay through the purchase of this bookcase. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Hampton Bay!*

## Table of Contents

Table of Contents .....	2	Planning Assembly .....	3
Safety Information .....	2	Tools Required .....	3
Warranty .....	2	Hardware Included .....	3
Pre-Assembly .....	3	Package Contents .....	4
		Assembly .....	5
		Weight Limits .....	11

## Safety Information

Read and understand all instructions before assembly.

## Warranty

### LIMITED ONE YEAR PRODUCT WARRANTY

#### WHAT IS COVERED

This limited warranty covers the original purchase of this product used for normal commercial,

Personal, or household use. The supplier warrants its products will be free from defects in materials and workmanship (normal wear and tear excepted) for a period of one (1) year from the date of purchase, except as provided below. The supplier, at its option, will replace with a comparable product, free of charge, any product purchased from it that fails under normal use as a result of such defect.

Materials are warranted for one year from date of purchase. Proof of purchase is required in the form of a receipt (copy or original) to validate the warranty.

The supplier provides this limited warranty in lieu of all other warranties either expressed or implied. Expressly excluded are all warranties of fitness for a particular purpose or merchantability. The supplier's sole obligation and the user's exclusive remedy under this warranty shall be limited to the repair, refund or replacement at the supplier's sole discretion and cost, of product or components.

THIS WARRANTY APPLIES ONLY TO THE U.S. AND CANADA.

#### WHAT IS NOT COVERED

This warranty does not apply to damage caused by fire, accident, negligence, misuse, or use other than as stated in product instructions, improper cleaning or other circumstances not directly attributable to defects in materials and workmanship.

Natural variations occurring in wood or other materials will not be considered defects, and the supplier does not warrant the color-fastness or matching of colors, grains, or textures of such materials. This warranty does not apply to: modifications of the product, attachments to the product not approved, and products that were not installed, used, or maintained in accordance with product instructions and warnings.

 
Contact the Customer Service Team at 1-855-HD-HAMPTON or visit [www.Hamptonbay.com](http://www.Hamptonbay.com).

# Pre-Assembly


## PLANNING ASSEMBLY

Compare all parts with the Hardware Included and Package Contents lists in this manual. If any part appears missing or damaged, do not assemble this product. Contact the Customer Service Team at 1-855-HD-HAMPTON or visit [www.HamptonBay.com](http://www.HamptonBay.com).

## TOOLS REQUIRED



Flathead  
screwdriver

 

Phillips  
screwdriver


## HARDWARE INCLUDED



 
**NOTE:** Hardware not shown to actual size.



\_\_\_a



\_\_\_b

 

\_\_\_c



\_\_\_d



 
\_\_\_e



\_\_\_f



\_\_\_g




\_\_\_h



\_\_\_i



 \_\_\_j




Safety Strap Kit

Part	Description	Quantity
a	Cam Lock	21
b	Cam Bolt	21
c	Wood Dowel	20
d	Shelf Support	8
e	Bolt	4
f	Knob	2
g	3.5*14 mm Screw	40
h	Hinge	6
i	3*14 mm Screw	37
j	Rod Holder	2
	Safety Strap Kit	1

## Pre-Assembly (continued)

### PACKAGE CONTENTS

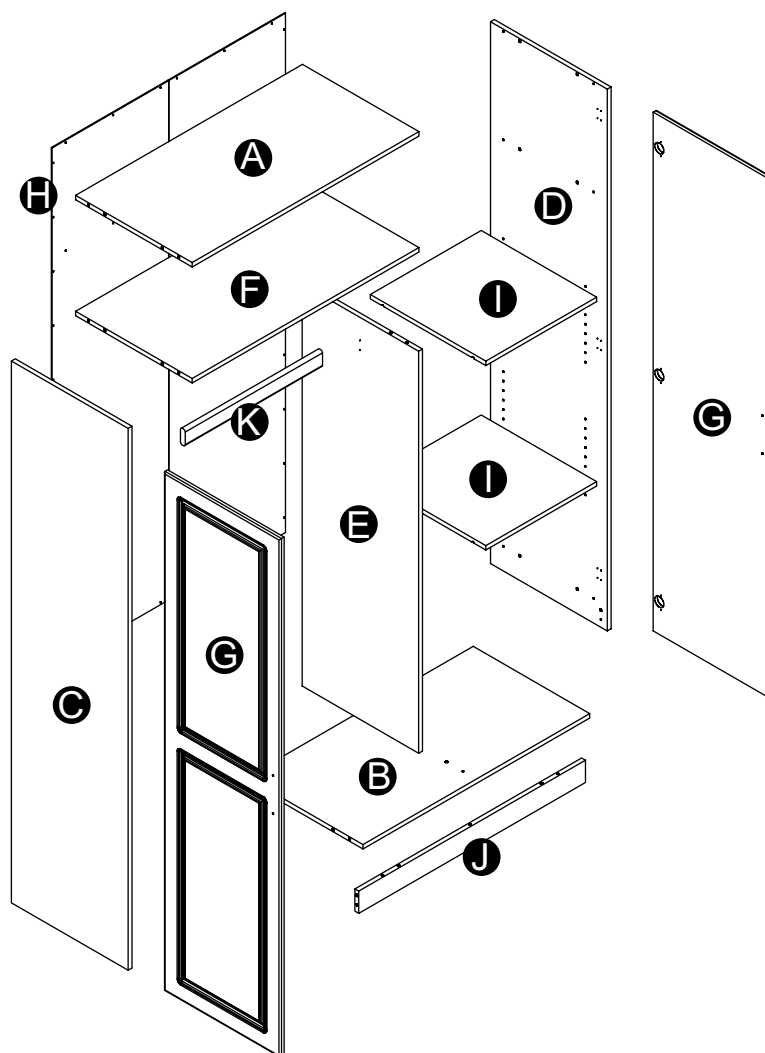


Part	Description	Quantity
A	Top	1
B	Bottom	1
C	Left Side Panel	1
D	Right Side Panel	1
E	Partition	1
F	Fixed Shelf	1
G	Door	2
H	Back Panel	1
I	Adjustable Shelf	2
J	Bottom Front Rail	1
K	Hanging Rod	1

# Assembly


## 1 Preparing the top , fixed shelf and partiton

- Insert four wood dowels (c) into the top (A).
- Insert four wood dowels (c) into the fixed shelf (F) , Turn two cam bolts (b) into the holes in the fixed shelf (F).
- Insert four wood dowels (c) into the partiton (E) , Useing two screws (g) fixed rod holder (j) with the partiton (E).

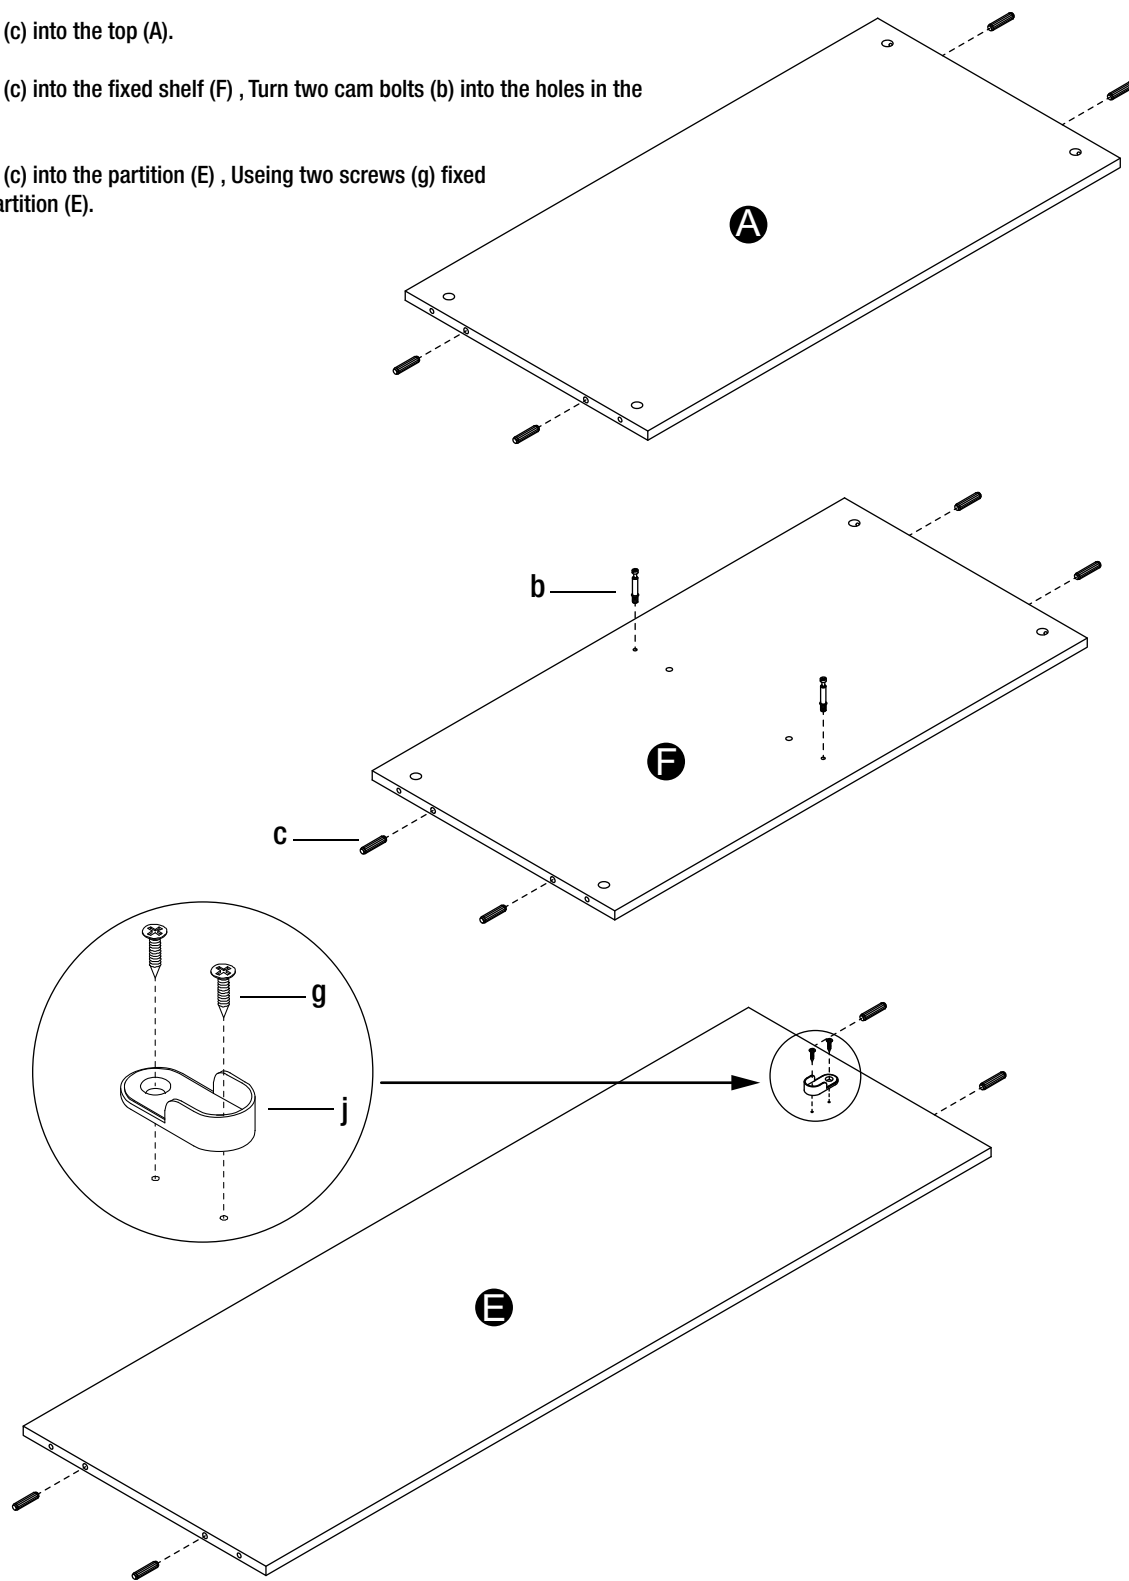

### 2 Preparing the side panel


- Turn seven cam bolts (b) into the holes in the left side panel (C) , using two screws (g) fixed rod holder (j) with the left side panel (C).
- Turn seven cam bolts (b) into the holes in the right side panel (D).

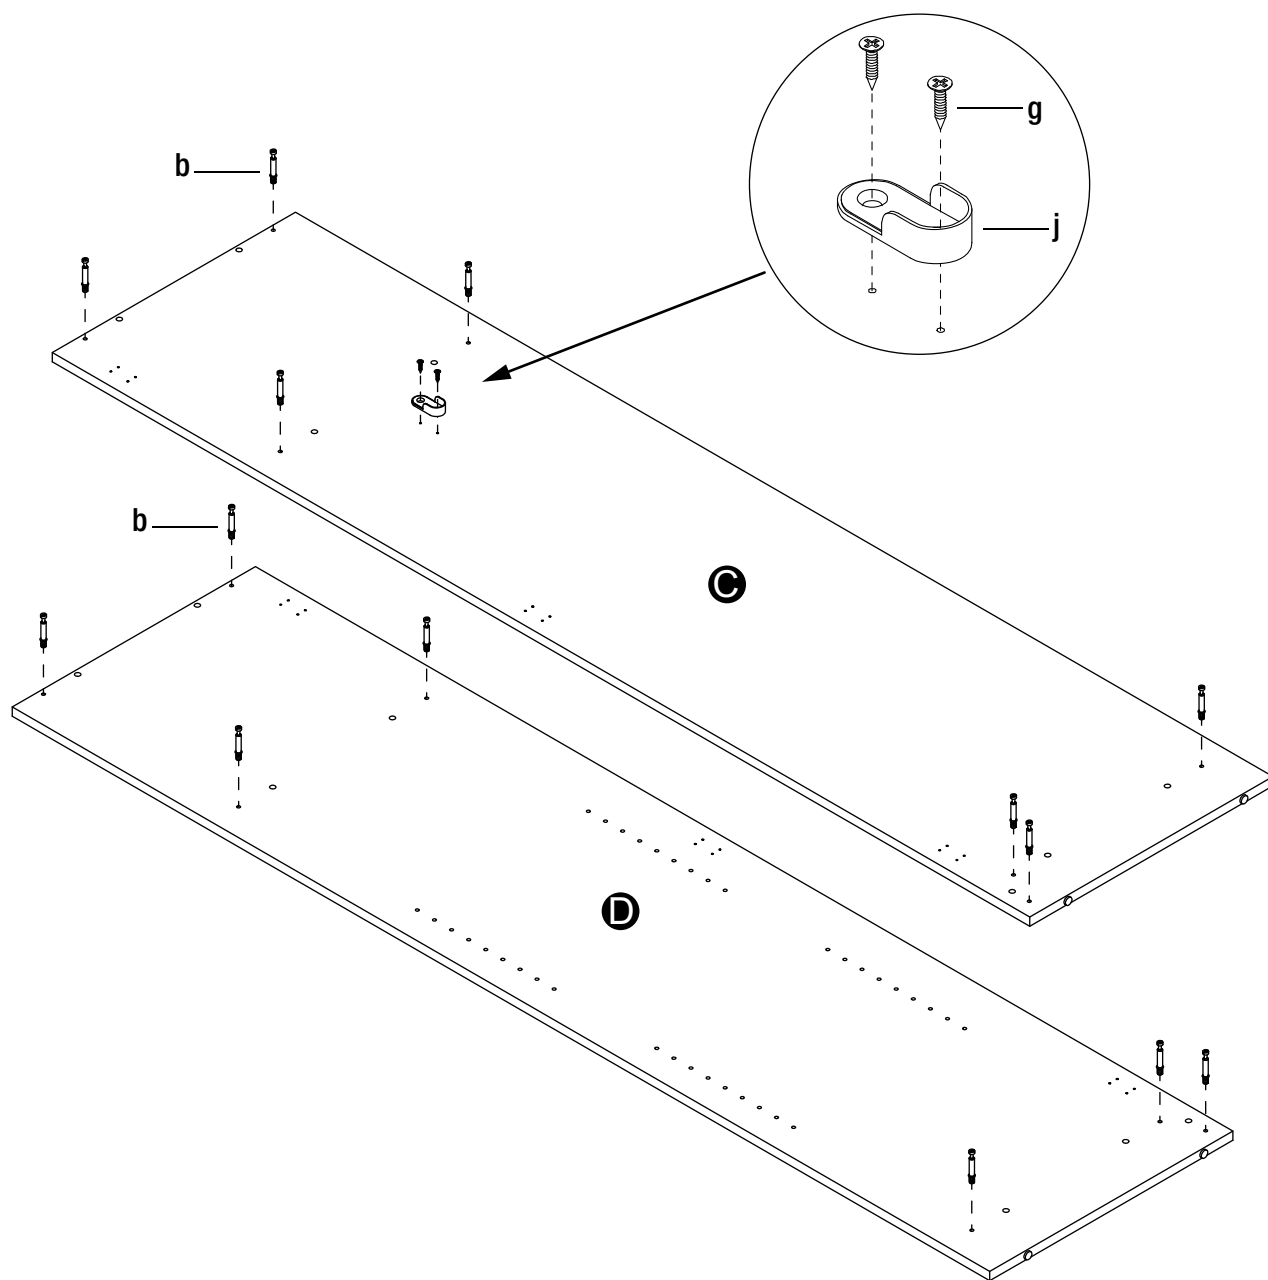

## Assembly


### 3 Assembling the bottom and bottom front rail

- Insert eight wood dowels (c) into the bottom (B) and bottom front rail (J).
- Turn three cam bolts (b) into the holes in the bottom (B).
- Connection bottom (B) and bottom front rail (J) , ensure that the wood dowels (c) and cam bolts (b) are fully inserted into the appropriate holes.
- Insert three cam locks (a) into the attached holes to the bottom front rail (J) , then turn all of the cam lock (a) clockwise until they lock into place over the cam bolts (b).

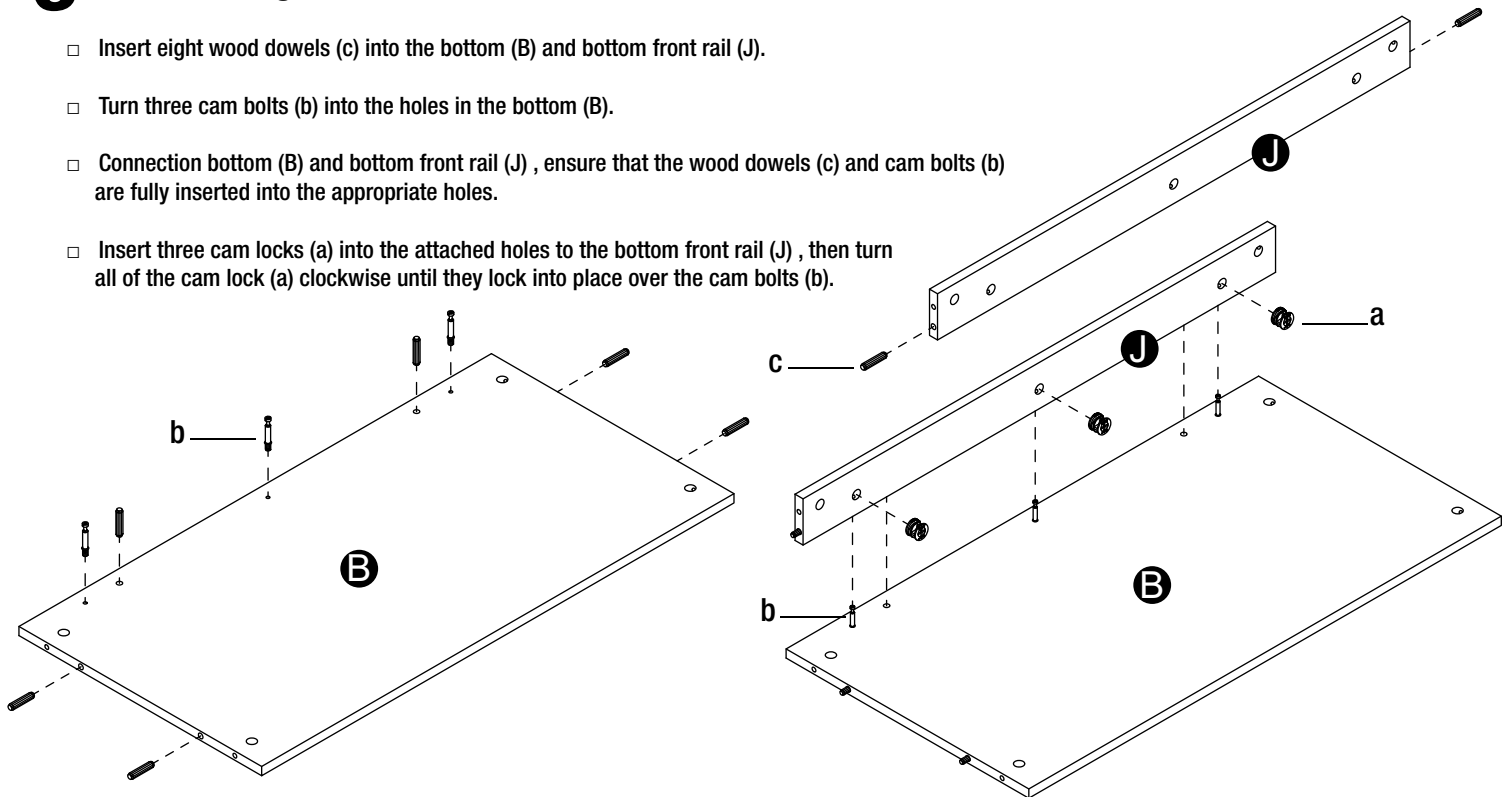



### 4 Assembling the fixed shelf and partition

- Connection fixed shelf (F) and partition (E) , ensure that the wood dowels (c) and cam bolts (b) are fully inserted into the appropriate holes.
- Insert two cam locks (a) into the holes to the partition (E) , then turn all of the cam lock (a) clockwise until they lock into place over the cam bolts (b).

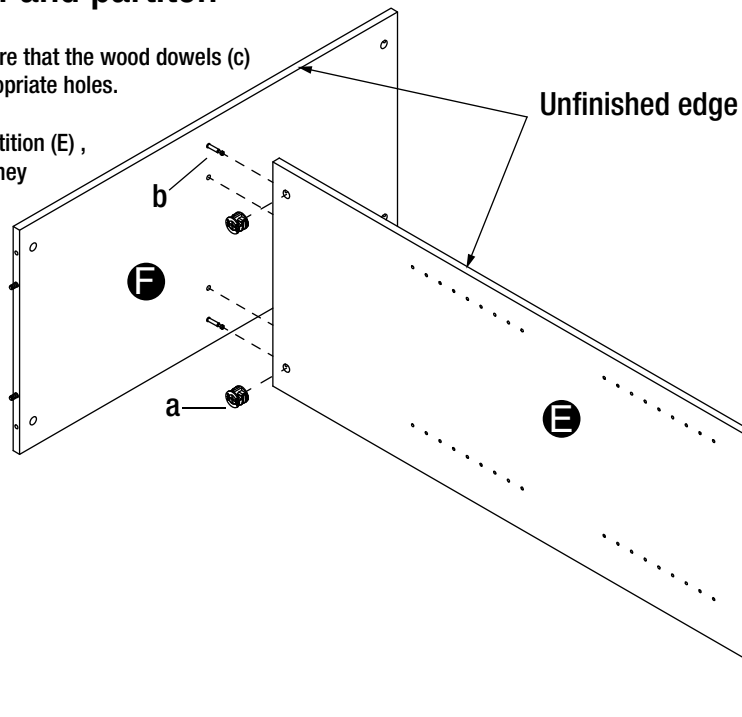

### 5 Assembling the partition and bottom


- Turn two cam bolts (b) into the holes in the bottom (B) , be careful of the cam locks holes on the other side.
- Connection partition (E) and bottom (B) , ensure that the wood dowels (c) and cam bolts (b) are fully inserted into the appropriate holes.
- Insert two cam locks (a) into the holes to the partition (E) , then turn all of the cam lock (a) clockwise until they lock into place over the cam bolts (b).

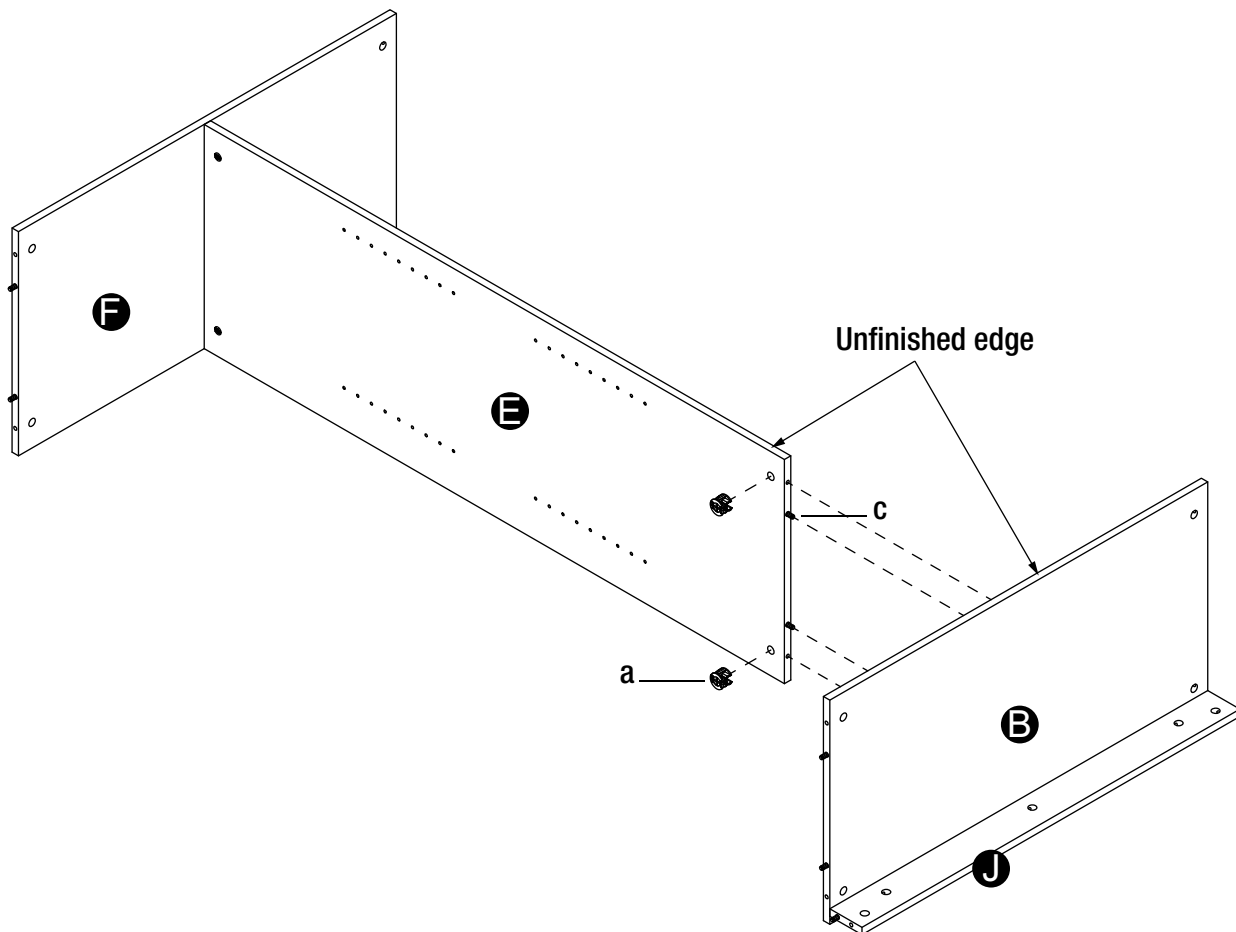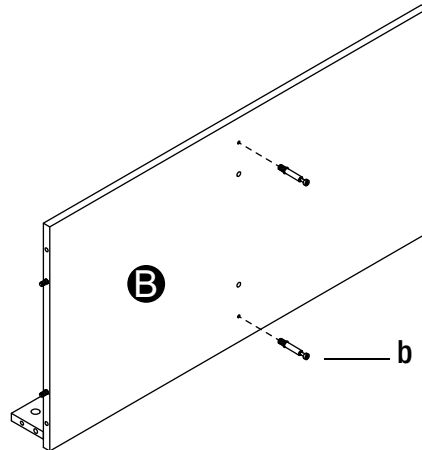




### 6 Assembling the right side panel

- Connection top (A) , fixed shelf (F) , bottom (B) , bottom front rail (E) , and right side panel (D) , ensure that the wood dowels (c) and cam bolts (b) are fully inserted into the appropriate holes.
- Insert seven cam locks (a) into the holes to the top (A) , fixed shelf (F) , bottom (B) , bottom front rail (E) , then turn all of the cam lock (a) clockwise until they lock into place over the cam bolts (b).

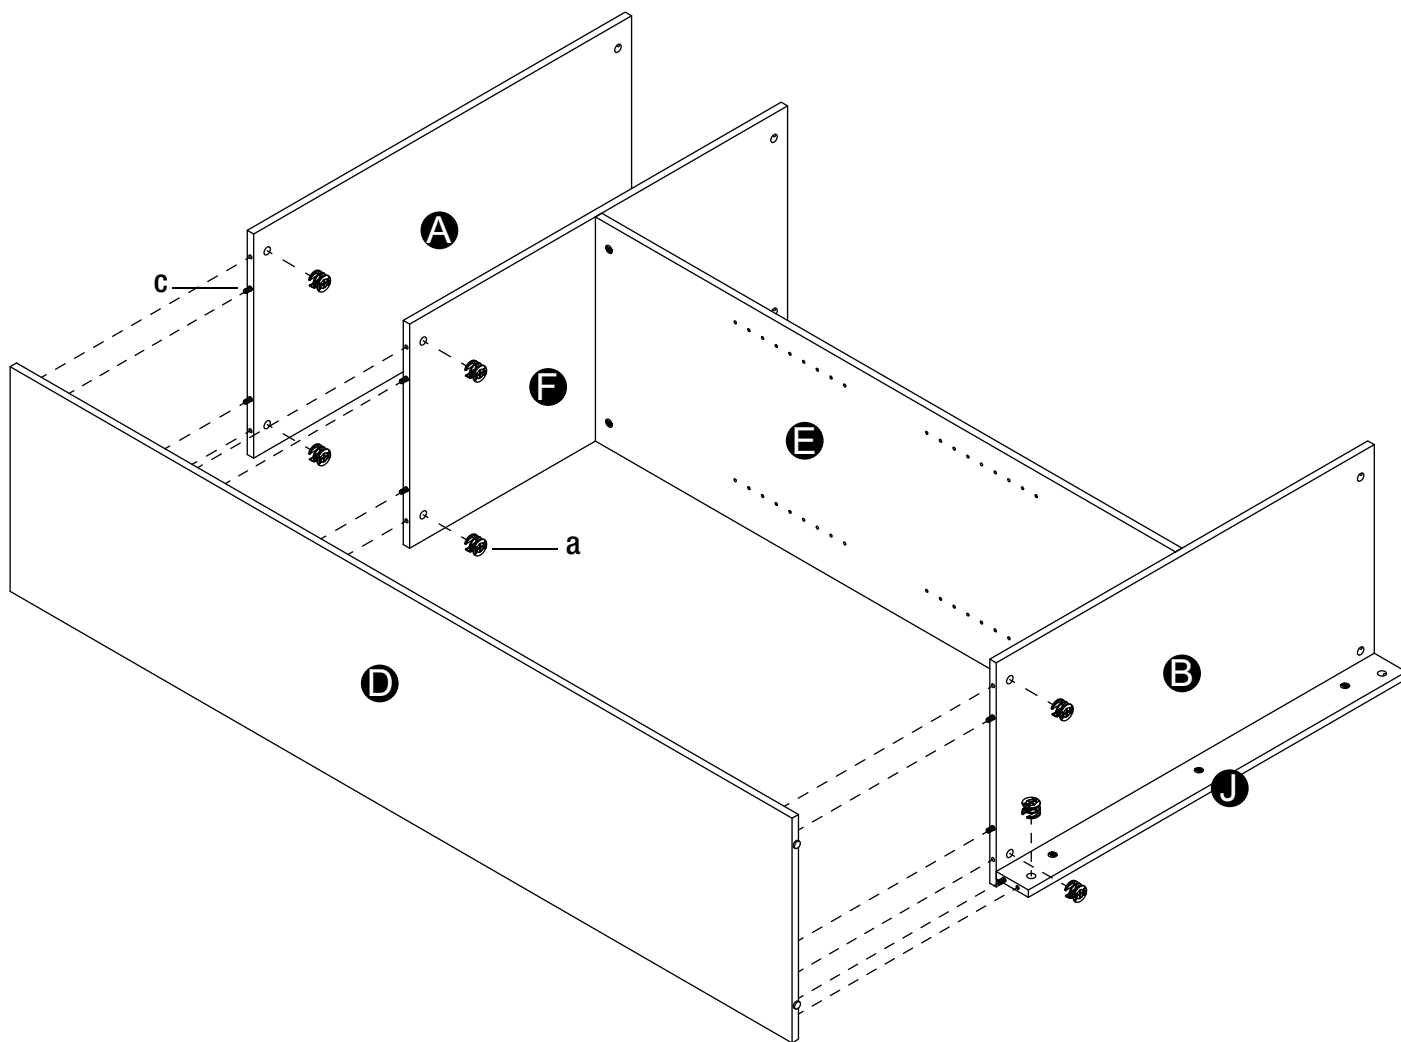

### 7 Assembling the left side panel


- Connection top (A) , fixed shelf (F) , bottom (B) , bottom front rail (E) , and left side panel (C) , ensure that the wood dowels (c) and cam bolts (b) are fully inserted into the appropriate holes.
- Insert seven cam locks (a) into the holes to the top (A) , fixed shelf (F) , bottom (B) , bottom front rail (E) , then turn all of the cam lock (a) clockwise until they lock into place over the cam bolts (b).

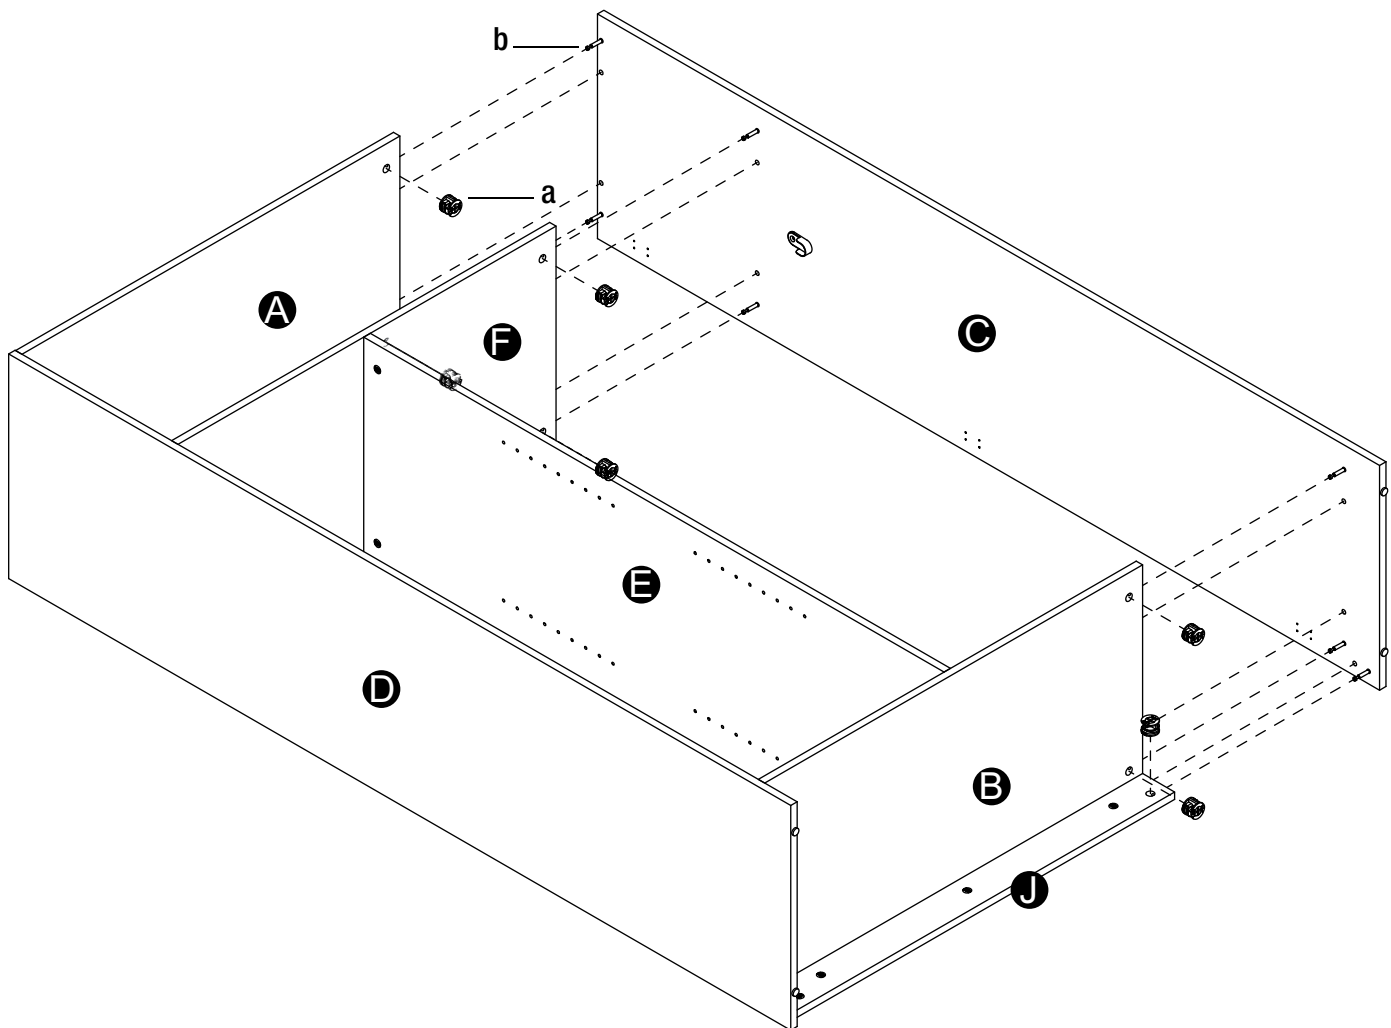

## Assembly (continued)


### 8 Assembling the back panel

- Fasten the back panels (H) to the assembled unit using thirty-seven screws (i) , Do not over tighten the screws.
- Opening the safety strap kit , screw the washer and strap to the back panel (H) as the picture showing below.

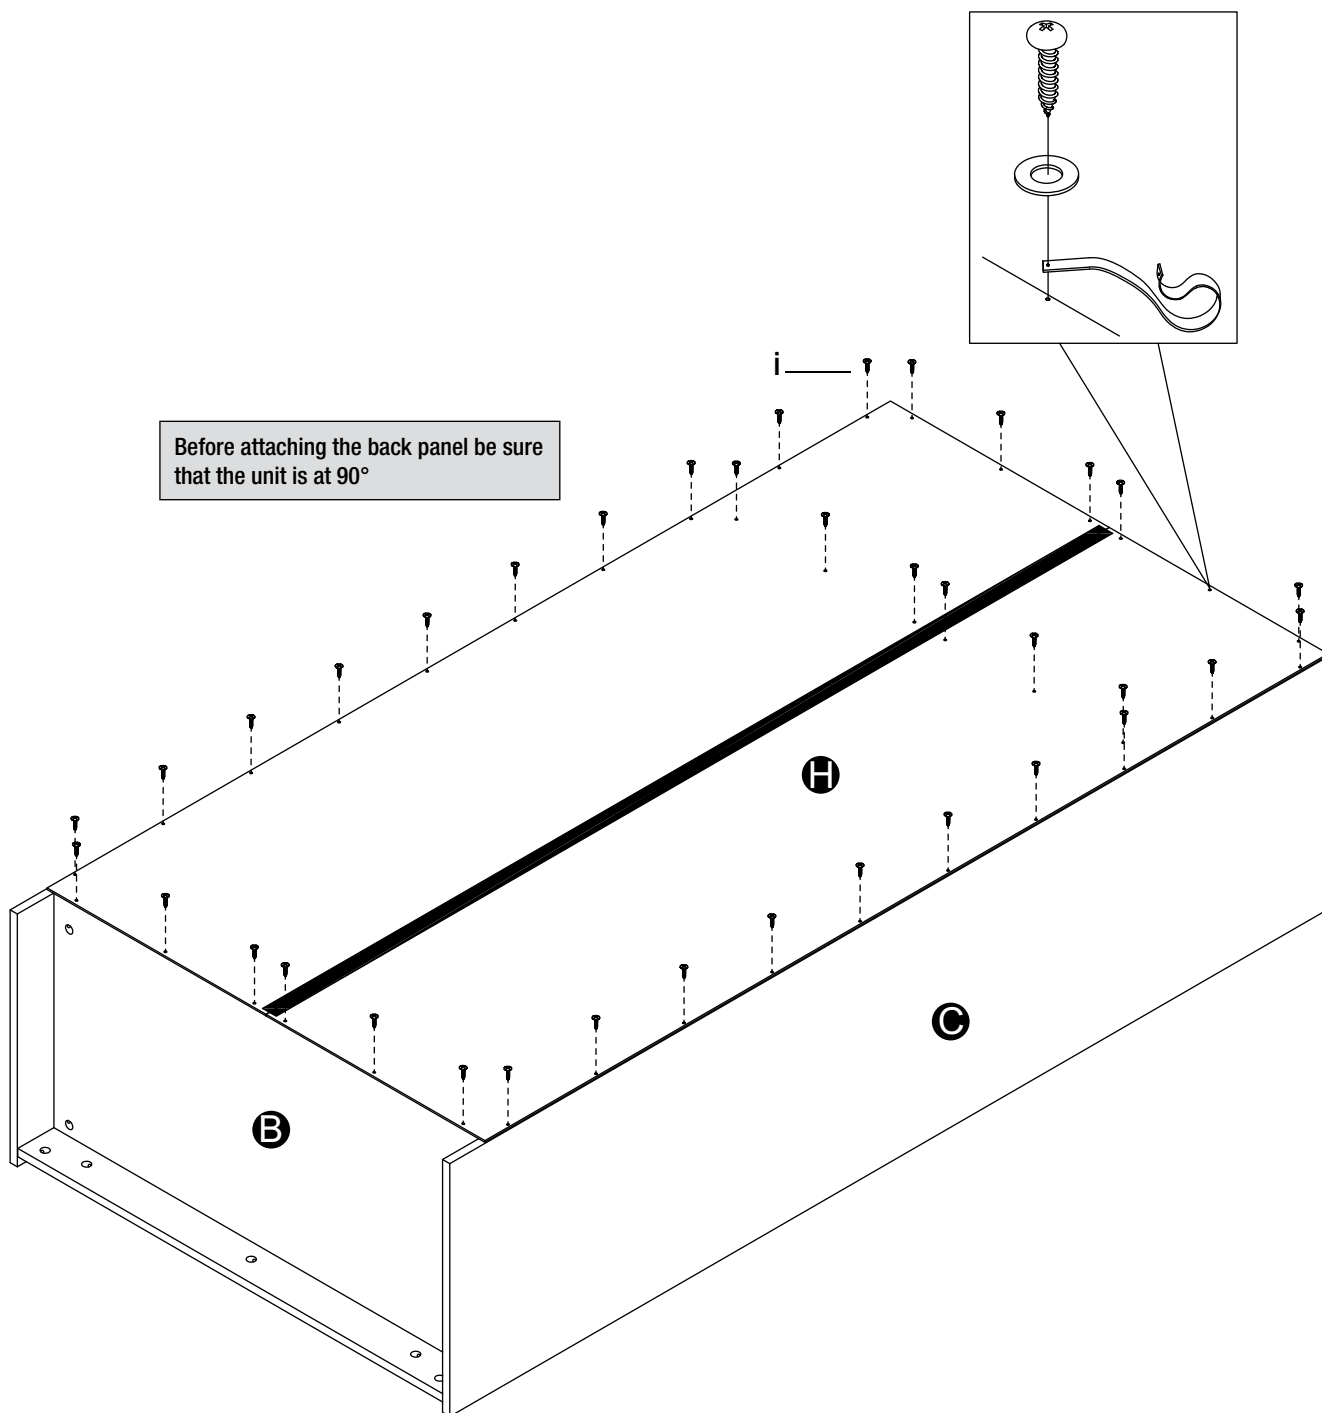


### 9 Assembling the hanging rod and hinge

- Insert hanging rod (K) into the two rod holders (j).
- Insert eight shelf supports (d) into the desired holes the cabinets assembly and place inside the two shelves (l) on top of the supports (d).
- Through four screws (g) with one hinge (h) to lock on the side panel , the same assembling step for the other five hinges (h).

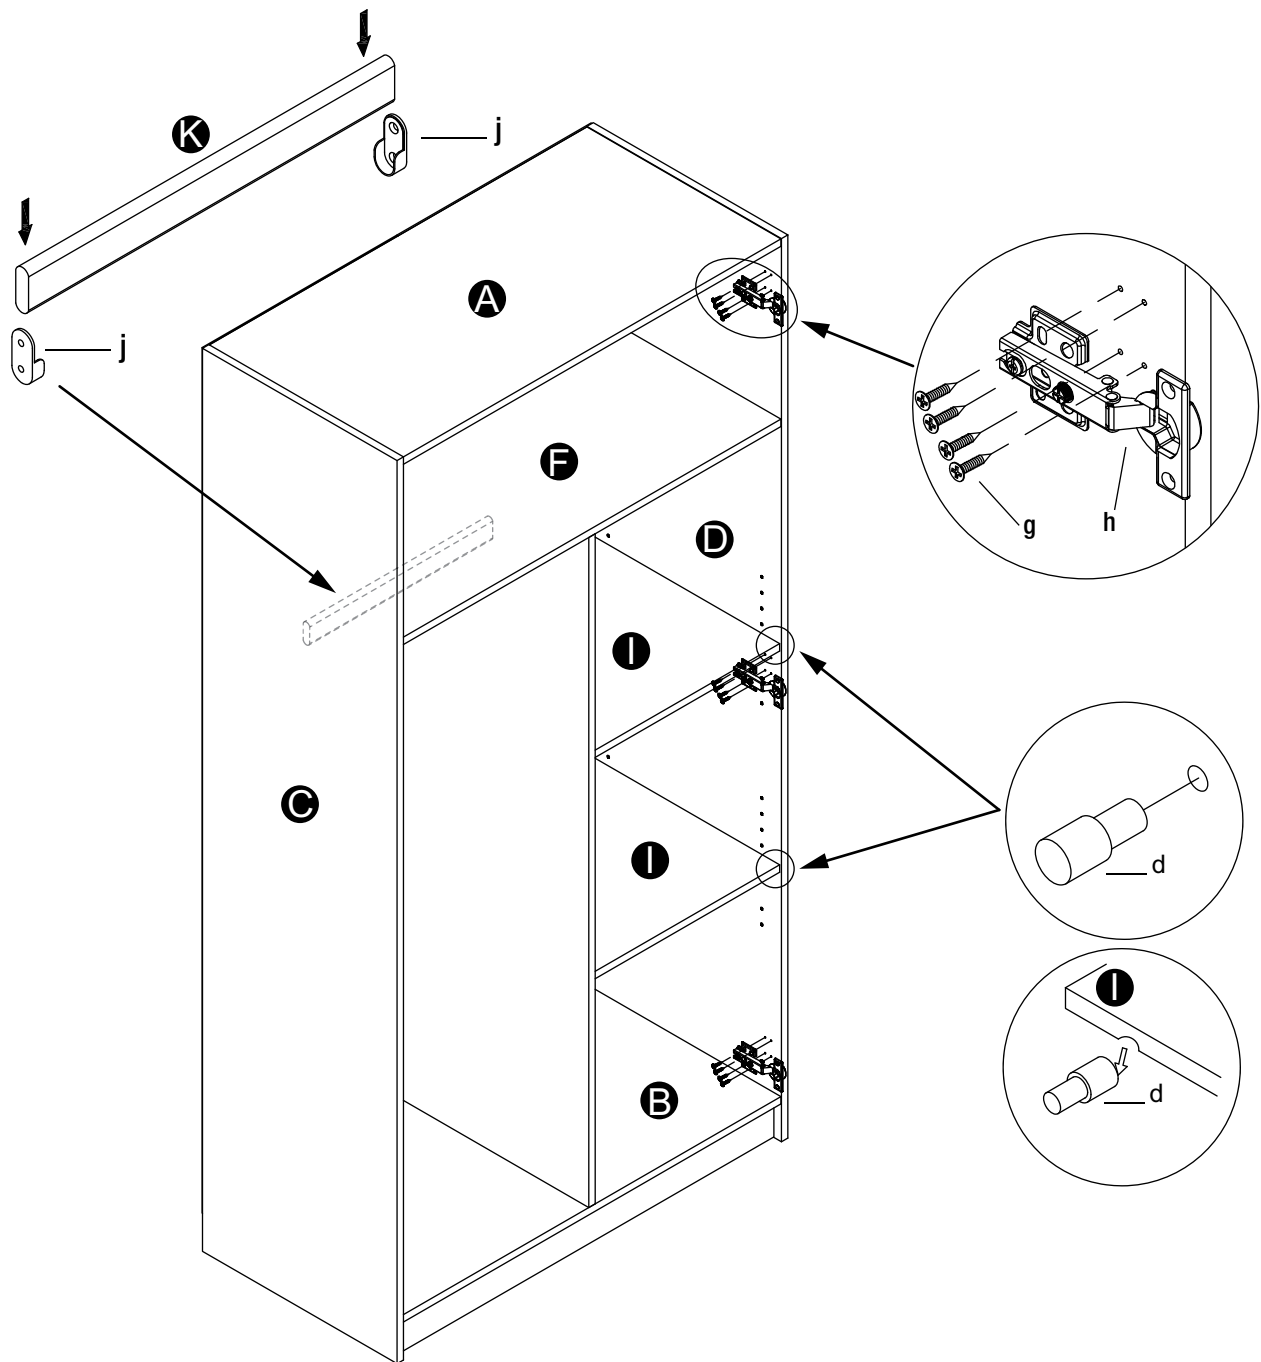


# 10 Assembling the door

- Through two screws (g) with one hinge (h) to lock on the door, the same assembling step for the other five hinges (h).
- Through four bolts (e) connect two knob (f) with the doors (G).

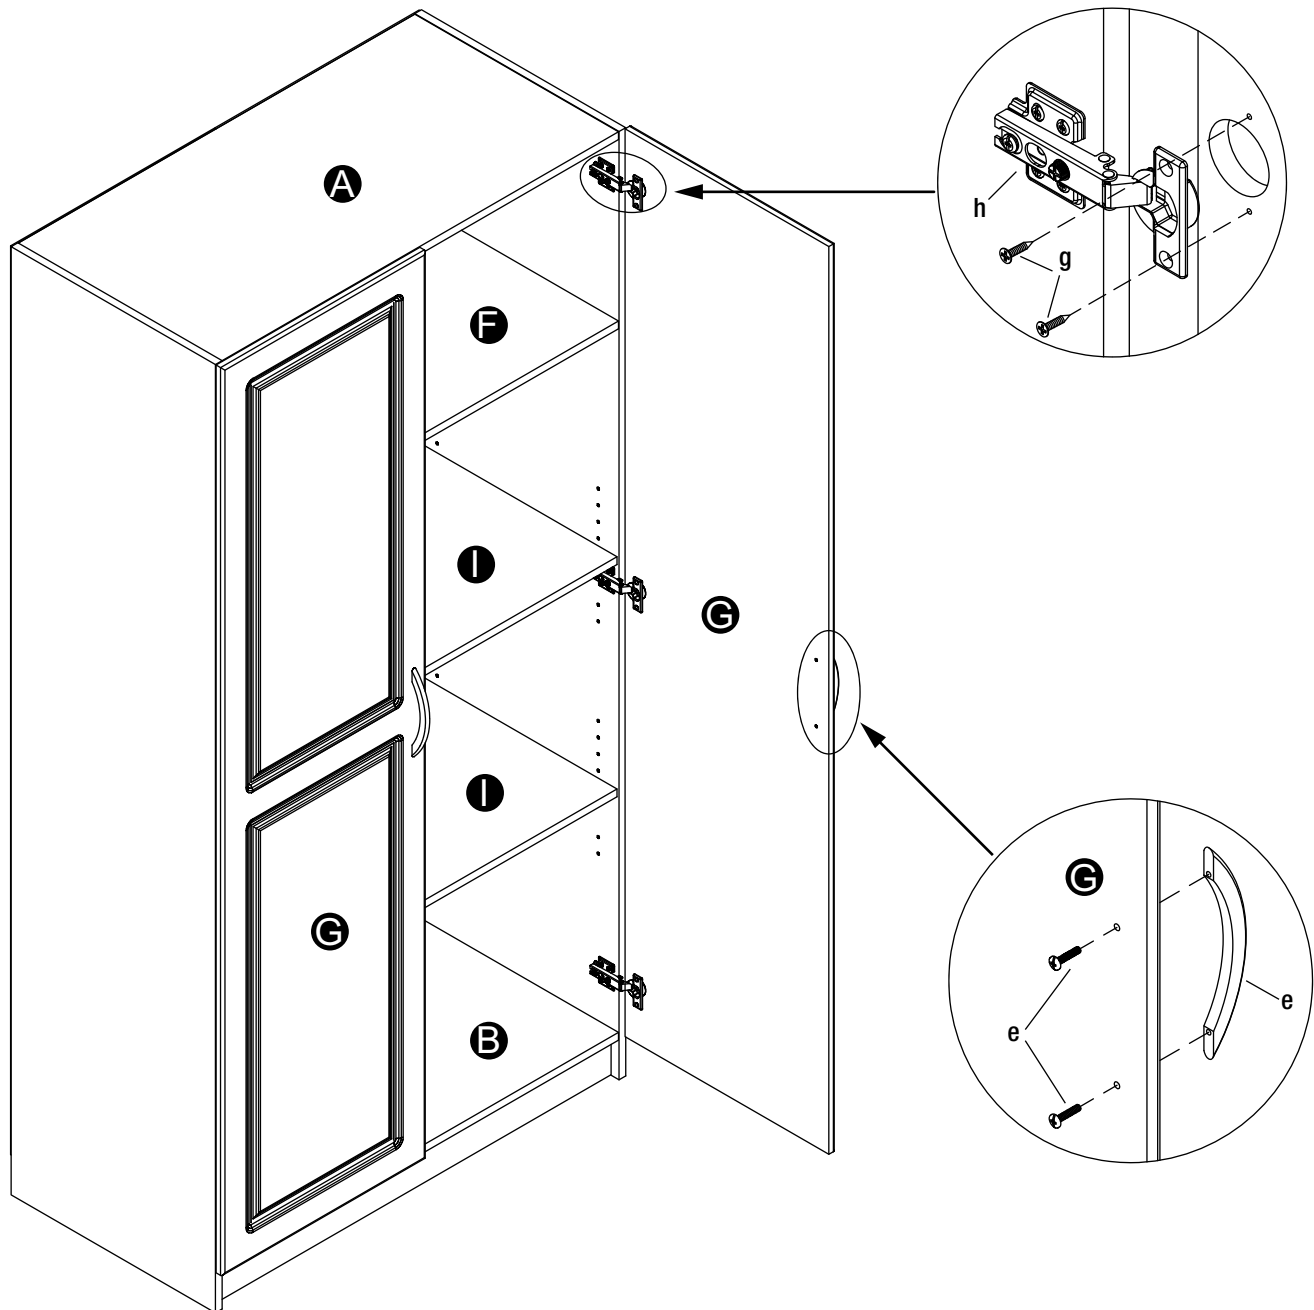

## Assembly (continued)

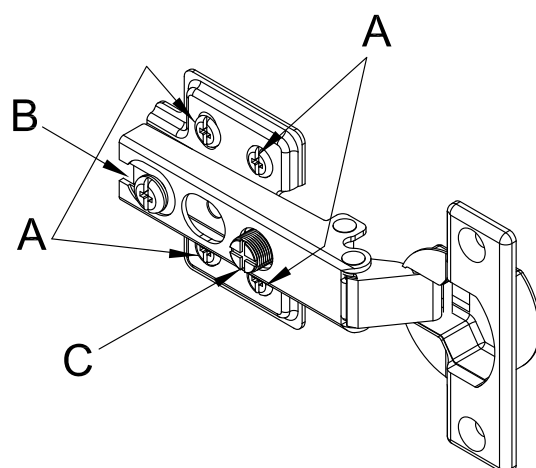


	<p><b>To adjust the vertical height.</b> Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which mean and you can adjust up or down by a few mm. Then tighten back up</p>
	<p><b>To adjust depth.</b> Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".</p>
	<p><b>To adjust side ways.</b> Turning the screw "C" on BOTH hinges on each door.</p>

## Assembly (continued)

### 11 Securing the cabinets to the wall

- Drill a 3/16" diameter hole (5mm) in the wallboard. Tap the wall anchor into the hole until it is flush. Fasten the safety strap to the wall anchor with the long screw.

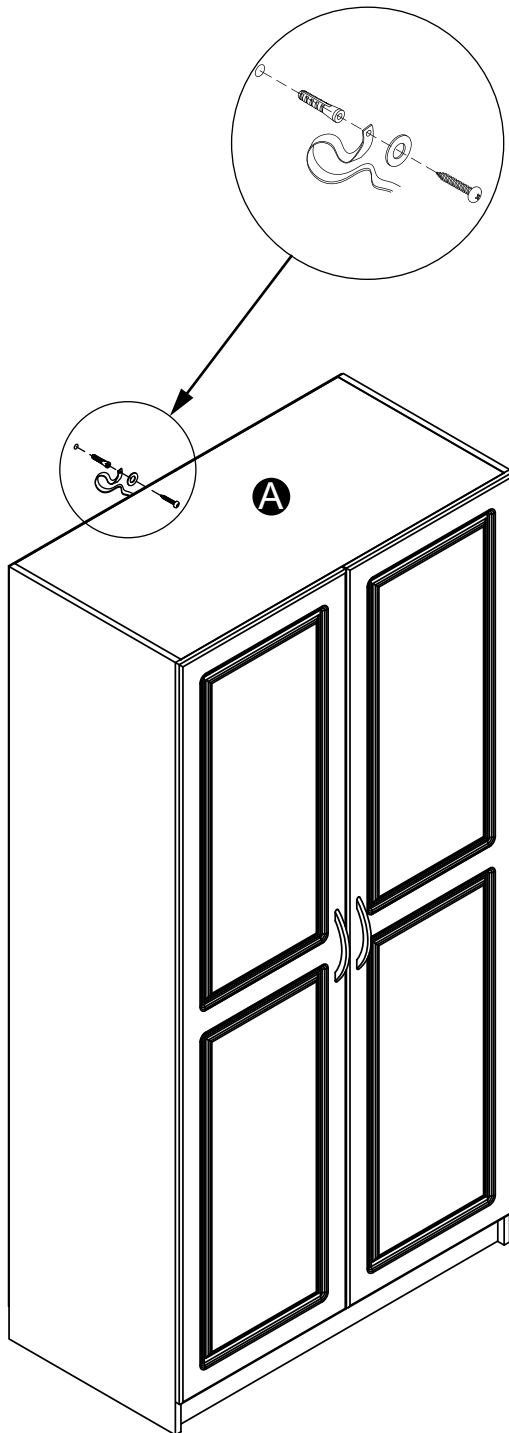


### WEIGHT LIMITS (option)

- This unit has been designed to support the maximum loads shown. Exceeding these load limits could cause sagging, instability, product collapse, and/or serious injury.



**WARNING:** Please ensure that all the objects are removed before moving the assembled unit. The unit must be lifted by more than one person, not dragged or pushed. Failure to do so will cause product damage, instability, product collapse, and/or serious injury.

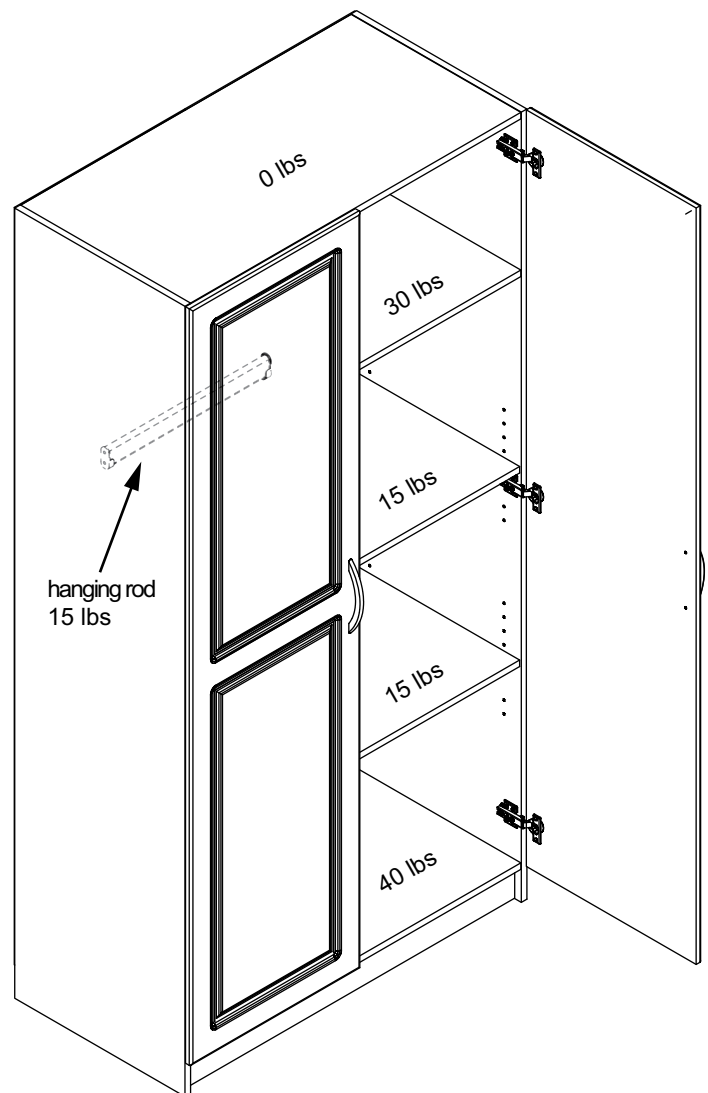



Questions, problems, missing parts? Before returning to the store,  
call Hampton Bay Customer Service  
8 a.m.-6 p.m., EST, Monday-Friday

**1-855-HD-HAMPTON**

**HAMPTONBAY.COM**

Retain this manual for future use.